Compak VSC Filter EvacuatorTM Feature

Each indoor Compak VSC filter is equipped with an EvacuatorTM chamber to remove airborne chloramines as they form. This system consists of a chamber around inside perimeter of filter with a 4" flanged connection on outside of tank (will vary based on equipment room layout and deck floor depth). This exhaust duct should be routed to a supplied fan which will be vented to outside atmosphere.









TD-150 Fan



Easy Installation Procedures




Secure support



Make connections



Connect ducts to fan housing

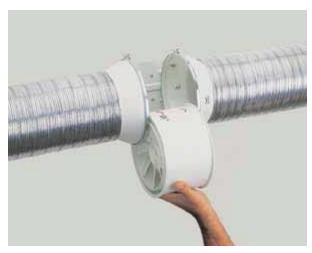

Simplified maintenance with slip out motor

